

# Installation Instructions

## Descriptions

The luminaire contains a constant-current driver and LED light sources. It works under technical conditions as the product labels indicate.

## Technical Parameter

LED Tunnel Lights								
Power	40W							
Input Voltage	<input type="checkbox"/> 100~240V	<input type="checkbox"/> 100~277V	<input type="checkbox"/> 220~240V	<input type="checkbox"/> 120~277V	<input type="checkbox"/> 277~480V	<input type="checkbox"/> Other ____	Frequency	50/60Hz
Power Factor	0.95							
Working Environment	-40°C~+50°C, 10%~90%RH							
Storage Environment	-40°C~+50°C, 10%~90%RH							
Mounting Height	4~6m							
Bolt Torque	17Nm							
Dimensions	260x240x150mm							
Net Weight	1.3kg							
Project Area	0.063m <sup>2</sup>							
Degree of Protection	<input type="checkbox"/> IP54			<input type="checkbox"/> IP65	<input type="checkbox"/> IP66	<input type="checkbox"/> IP67	<input type="checkbox"/> Other ____	

 
Notes: The above net weight is typical value. The power above are maximum rated power of the model subject to tolerance of 10%.

## Applications


Trunk road, sub-trunk road, highway and other roads in tunnels.

## Installation and Maintenance


### Installation

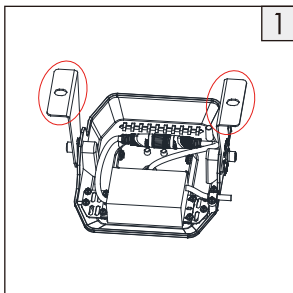

 1. Mount the fixture with screws at the bracket.  
(Mounting screws are not provided in package.  
Screw hole diameter: Ø11mm.)

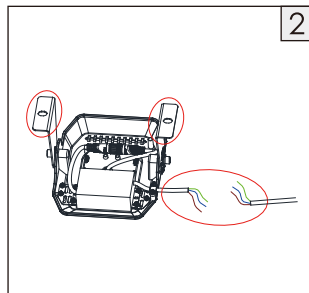


 2. Connect the wires to AC input. Make sure it grounded sufficiently.

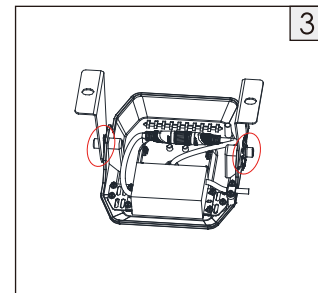


3. Loosen the screws on brackets to adjust to a proper angle.

### Cable Connectors

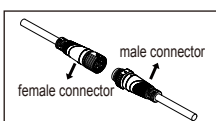 

 1. Connect the male and female connectors by aligning the indicative arrow on them.

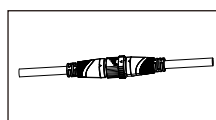

2. Hold the nut on one terminal still, meanwhile, rotating clockwise till the one on the other terminals is tightened up. Otherwise the waterproof performance might be affected.

### Wiring

Power Supply End	Earth wire	Neutral wire	Live wire
Fixture End	Yellow-green lead	Blue lead	Brown lead
	Green lead	White lead	Black lead

# Installation Instructions

## Caution

- a** Disconnect or turn off power before installation, maintenance and wiring.
- b** Cable connection must be insulated and waterproof.
- c** If the luminaire contains a glass cover, it's possible the tempered glass would break into small pieces.  
Ambient temperature:  $-40^{\circ}\text{C}\sim+160^{\circ}\text{C}$ . Maximum temperature rise of glass:  $\Delta t160^{\circ}\text{C}$
- d** The light source of this luminaire is not replaceable. When the light source's lifetime comes to an end, it is the whole luminaire that should be replaced.

 
Warning: Danger! Electric shock risk!

(via IEC 60417-6042 (2011-11) )




For luminaires with glass cover: The broken cover should be replaced.

Rectangle



Round

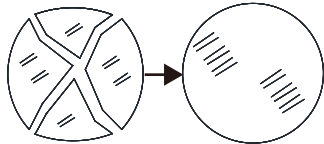 

The luminaire shall be installed by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling

## Remarks

1. This luminaire uses permanent connection on power supply with flexible cable and wires (60245 IEC57). Sufficient length of cable is reserved for connection to AC power. Protection over the connection joint and elimination of tensile force there should be ensured.
2. This luminaire uses type Z attachment: the external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.
3. Wiring: the connection to AC power should be operated on terminal blocks in a wiring box with a degree of protection at least equivalent to the luminaire, and there should be devices to fixate wires.
4. The luminaire can be mounted onto ordinary combustible surfaces.
5. The type of insulation between LV power supply and conductor control are listed as follows. The insulation maintenance can also rely on other external components(product) that connected to the same control bus. It is the responsibility of the connected system designer, but not the luminaire manufacturer.
  - FELV control signal and LV power supply: basic insulation.
  - SELV control signal and LV power supply: reinforced insulation or double insulation.